



R5F
ANNEAU DE REMORQUAGE
TOWING STRAP
ANNILLO REMOLQUE

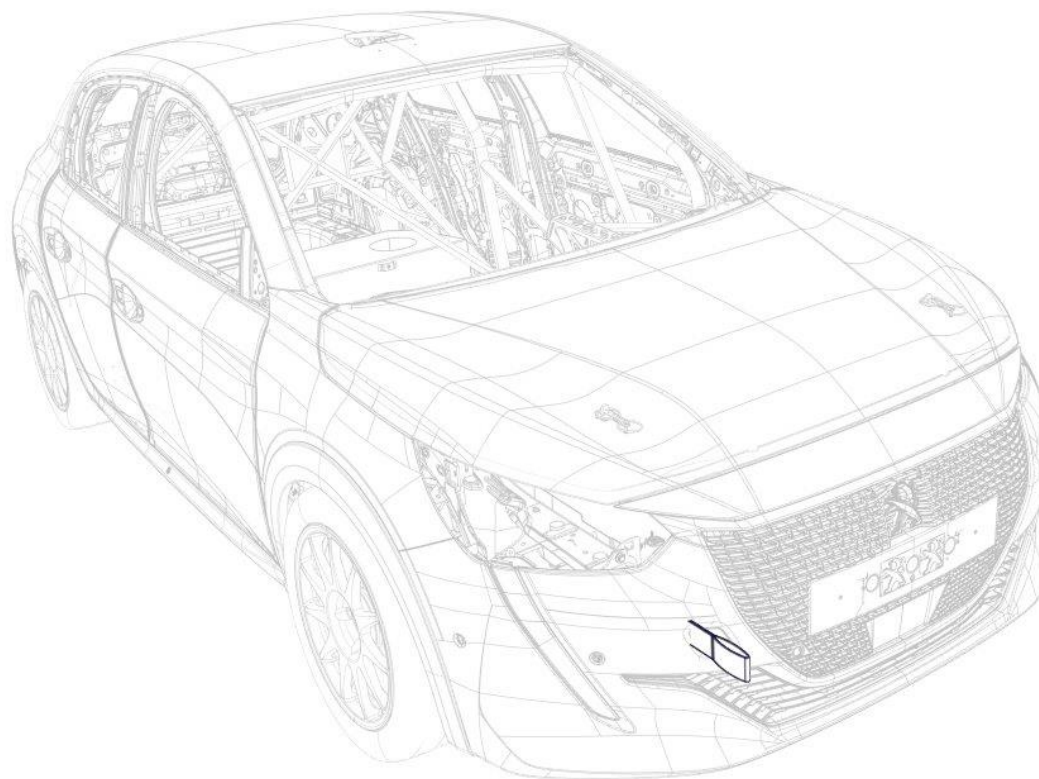

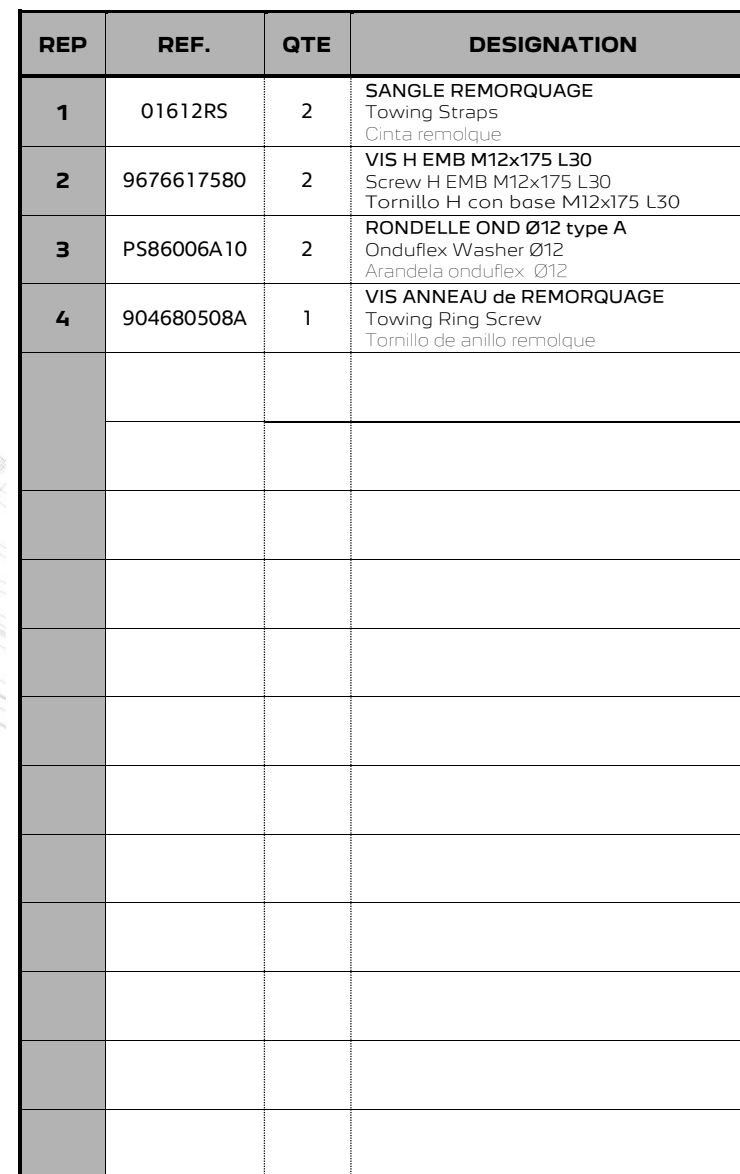

Montage de l'anneau avant :


- Prendre la sangle (rep.1).
- Prendre la vis (rep.2). L'insérer à travers la rondelle (rep.3) et le trou de la sangle (rep.1). Serrer à **80N.m**.

Front towing strap assy:

- Fix towing strap (rep. 1) using M12 screw (rep. 2) and washer (rep.3).
- Tighten to **80N.m**.

Montaje del anillo remolque delantero:

- Fijar la cinta (rep.1) con el tornillo (rep.2) y arandela (rep.3)
- Apretar a 80N.m

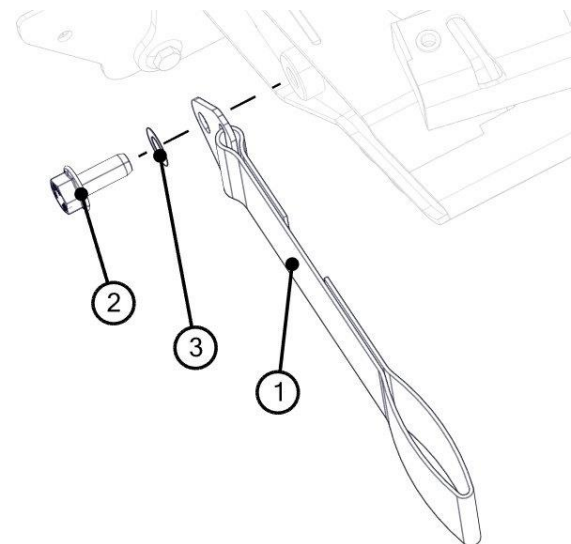

80N.m

Montage de l'anneau arrière :


- Monter la rallonge (rep.4). Serrer à 80N.m.
- Prendre la sangle (rep.1).
- Prendre la vis (rep.2). L'insérer à travers la rondelle (rep.3) et le trou de la sangle (rep.1). Serrer à 80N.m.

Rear towing strap assy:

- Fit extension bar (rep.4) Tighten to 80N.m.
- Fix towing strap (rep. 1) using M12 screw (rep. 2) and washer (rep.3).
- Tighten to **80N.m**.

Montaje del anillo remolque trasero:

- Colocar el tornillo prolongador (rep.4). Apretar a 80N.m
- Fijar la cinta (rep.1) con el tornillo (rep.2) y arandela (rep.3)
- Apretar a 80N.m

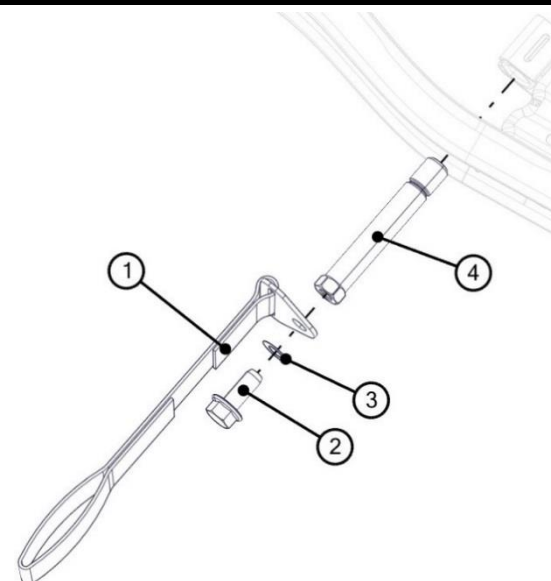

80N.m