



Recommended mileage

208 R2

ENGINE AND ACCESSORIES		
Engine	Rebuilding (Sodemo)	2400 km
Engine oil and filter	Replace	After every rally
Starter	Replace	4800 km
Alternator	Replace	4800 km
Power steering pump	Replace	4800 km
Accessories belt	Replace	400 km or every other rally
Water pump belt	Replace	400 km or every other rally
Fuel pump	Replace	4800 km
Elastic mount for engine and gearbox	Replace	4800 km
Engine, gearbox & anti torque mounts	Check	4800 km
TRANSMISSION		
Gearbox	Rebuilding (SADEV)	1000 km
Gerabox oil	Replace	after the first 50 km
	Replace	200 km
Clutch disc	Replace	600 km or if thickness < 6,45 mm
Clutch mecanism	Replace	1600 km
Driveshaft	Replace	2000 km
SUSPENSION, STEERING		
Track control arm	Replace	2400 km
Track rod	Replace	2400 km
Track rod	Replace	2400 km
Top strut bearing	Replace	4800 km
Upright	Replace	4800 km
Rear hub	Replace	4800 km
Steering rack	Replace	4800 km
Goujons de roue	Replace	4800 km
Wheel stud	Replace	2400 km
Strut	Clean / grease	After every rally or in case of rain / mud
Damper guide ring	Replace	Check after every rally
Damper	Rebuilding (Öhlins)	1000 km
BRAKE		
Front caliper	Rebuilding kit	1200 km
Front tarmac disc	Replace	1200 km
Front gravel disc	Replace	1200 km
Rear caliper	Rebuilding kit	1200 km
Rear disc	Replace	2400 km
Master cylinder	Replace	4800 km