

⚠ IMPORTANT.


TO ENSURE OPTIMAL AUDIO PERFORMANCE, POSITION YOUR MICROPHONE DIRECTLY IN FRONT OF YOUR MOUTH, MAINTAINING A MAXIMUM DISTANCE OF 5 mm FROM YOUR LIPS.

Read this notice before placing the MICROPHONE in your helmet!


The HP10 Rally, HP10 Rally WW, Mag-10 Rally Carbon, Mag-10 Rally Carbon WW, and Mag-10 Rally Pro (New Models) are delivered with the new Zeronoise Adjustable Single Microphone.

This Adjustable Single Microphone offers


- Enhanced audio quality and microphone stability
- Easy positioning of the microphone with the telescopic rubber mechanism
- Three adjustable levels for precise positioning
- Quick installation & replacement with Velcro attachment

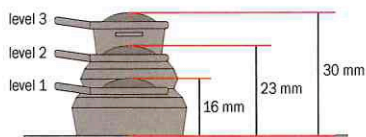


DIRECTIONS TO REPLACE AND INSTALL IN NEW HELMET MODELS

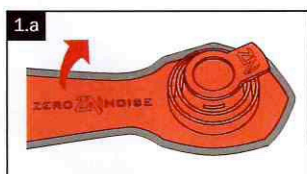

1.a. Remove the old entire base-telescopic rubber assembly, which is secured with Velcro.

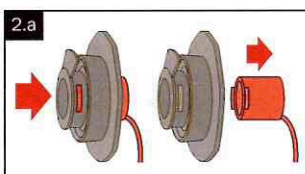

2.a. Push firmly on the telescopic rubber section to detach the microphone holder assembly. Unhook it from the inner tab.

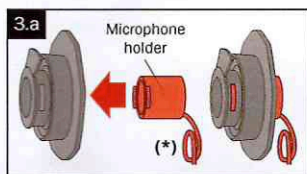


3.a. Insert the microphone holder into the new telescopic rubber structure. Make sure that the inner tab fits into the groove of the rubber.




4.a. Attach the new complete base-telescopic rubber assembly to the Half Chin Bar, securing it in place with Velcro.

If you need to assemble a new microphone holder, follow steps 5.b, 6.b, 7.b and 8.b after disassembling the old microphone holder.


DIRECTIONS TO REPLACE AND INSTALL IN OLD HELMET MODELS

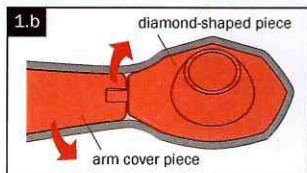


1.b. Remove the diamond-shaped piece and microphone cone. Pull the tab and unhook the Velcro. Remove the arm cover piece.

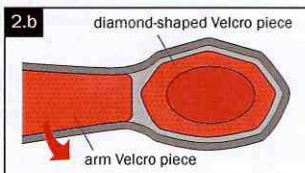


2.b. Remove the arm Velcro piece and clean the carbon surface with isopropyl alcohol to ensure that all glue residues are completely removed. Make sure the diamond Velcro piece remains attached to the Half Chin Bar.

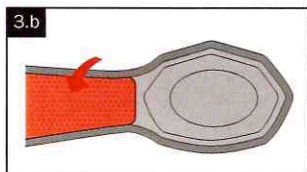


3.b. Place the new arm adhesive-sided velcro piece included in the kit on the Half Chin Bar.

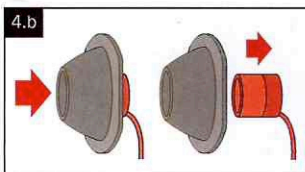


4.b. Push the microphone FR foam protector to remove the microphone from the separator cone.

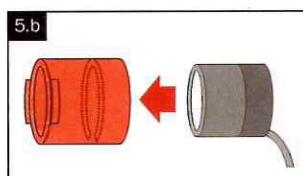

5.b. Insert the microphone into the new microphone holder passing through it completely.

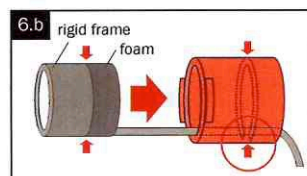

6.b. Move the microphone back until its rigid frame rests firmly against the inside of the holder.

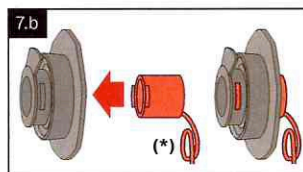

7.b. Insert the microphone holder into the telescopic rubber structure. Ensure that the inner tab aligns with and fits securely into the groove of the rubber.









8.b. Attach the new complete base-telescopic rubber assembly to the Half Chin Bar, securing it in place with Velcro.

(*) Leave sufficient slack in the cable beneath the cone to allow free movement of the microphone. Ensure the cable is not pinched between the Half Chin Bar (HCB) and the shell during final installation, as it may affect functionality or cause disconnection.

HOW TO USE

TO DEPLOY IT

Unfold each level in 2 steps, starting from the top and ending with the bottom pulling the tab towards your lips until a distance of approximately 5 mm is achieved.

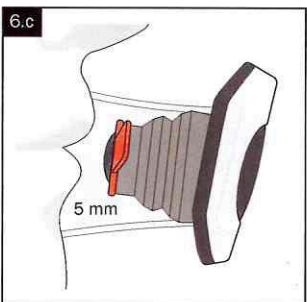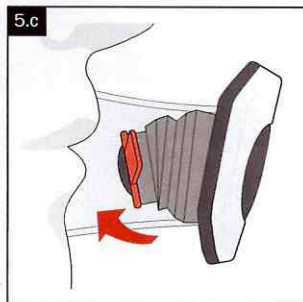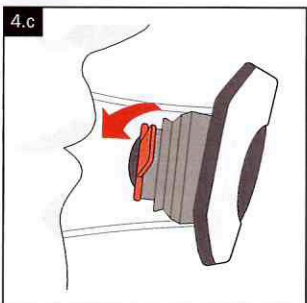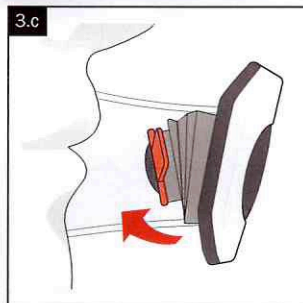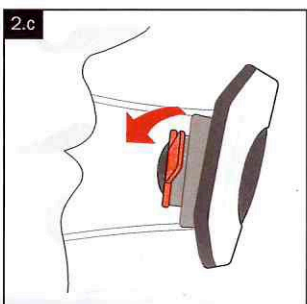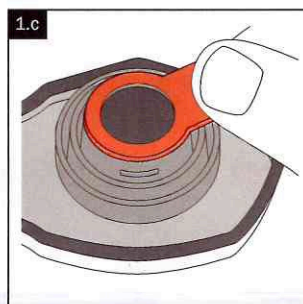

TO FOLD IT

Repeat the process in reverse until the desired distance is achieved.